



Pocket-Sized Gimbal Camera


LENS0

Quick Guide


4K Video Capture Face Tracking Rotation Touchscreen Control Creative Shooting Modes

Camera components:

 Front view

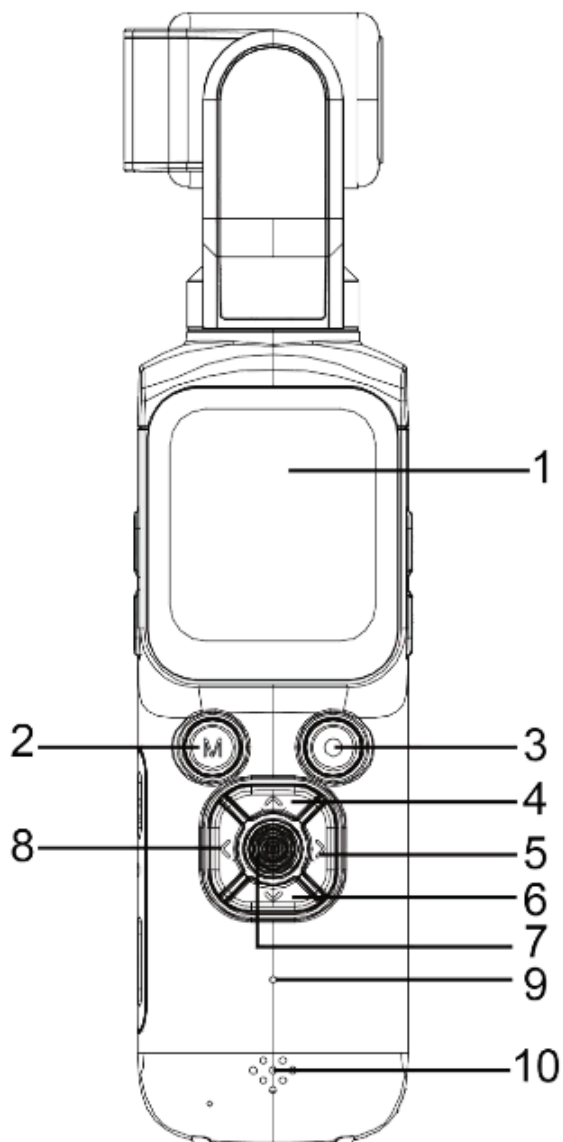

Rear view

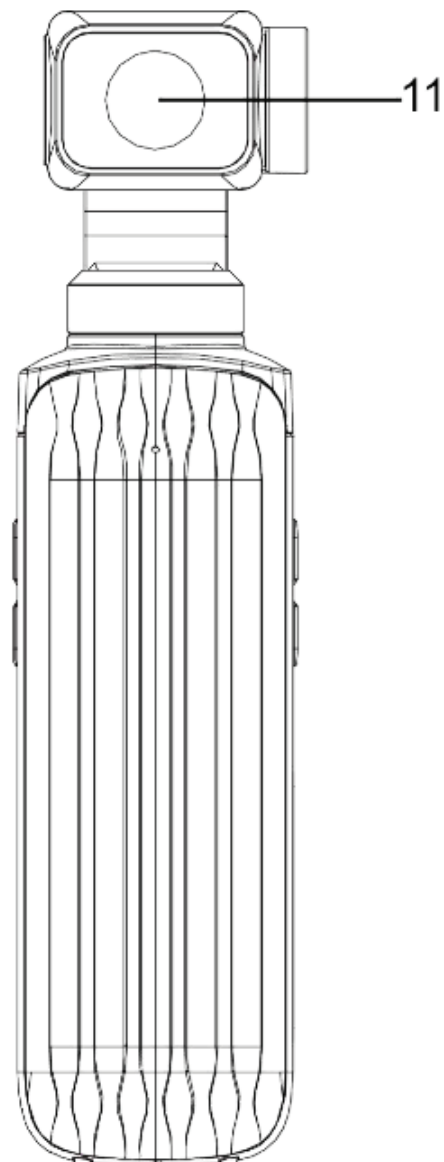 

1: Display screen

2: M button (mode switching button)

3: Photo/Video button

4: Up button

5: Right button

6: Down button

7: OK button

 
8: Left button

9: Charging indicator/Working indicator

10: Speaker


11: Lens

Left view

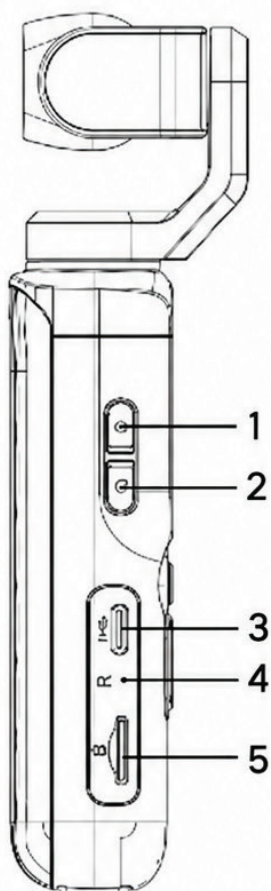


- 1: Menu button
- 2: Playback button
- 3: TYPE-C USB interface
- 4: Reset hole
- 5: Memory card slot

 Right side view

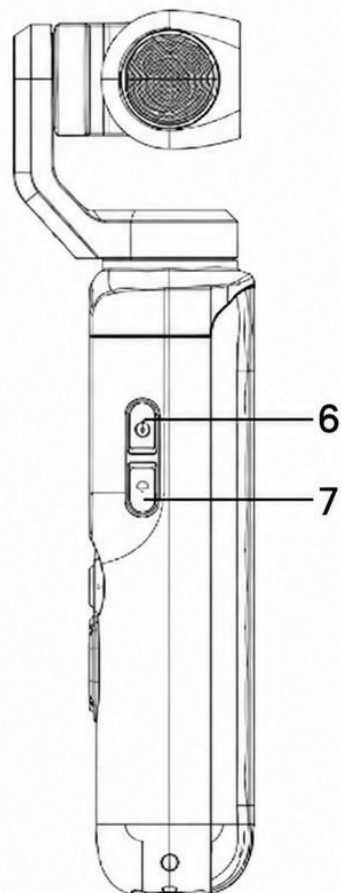

- 6: Power button
- 7: One-touch flip button

 Bottom view

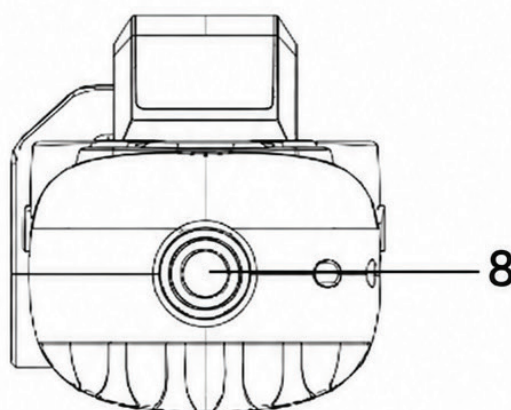

Buttons/Indicator	Function
Power button	Power on/Power off
One-click flip button	A short press switches the camera direction: Selfie mode (camera facing yourself)
	Pressing again switches the camera direction: Regular mode (camera facing forward)
Menu button	Open/close menu settings
Playback button	Open/Exit media player
M button (Mode switching button)	Open the mode selection page
Camera button	Photograph
	Start recording / End recording
Up button	Select upwards/Long press to zoom in digitally
Right button	Select to the right
	Short press to rotate the lens to the right by a certain amount
	Press and hold to continuously rotate the lens to the right
Down button	Select downwards/Long press to zoom out digitally
	Short press to activate face detection and tracking
Left button	Select to the left
	Short press to rotate the lens to the left
	Press and hold to continuously rotate the lens to the left
OK button	Confirm
USB	Charging via USB cable
	Connect to the computer using a USB cable
	Webcam

Touch function:



The display screen features touch-sensitive icons with the following corresponding functions:

icon	illustrate
	Lock function (swipe up to unlock)
	Brightness (0%-100%)
	Notification sound settings (High/Medium/Low/Off)
	Enter menu settings
	Filters (Normal/Black and White/Negative/Vintage/Red/Green/Blue/Purple/Cyan/Yellow/Ins1977/Bronze Glow/Rainbow Out/Binarization/Dusk/LOMO/Halo/Cross Processing/Dark Tone/Mono Red/Mono Blue)
	ISO(Auto/100/200/400/800/1600/3200/6400)
	Exposure settings (-3/-2/-1/0/1/2/3)
	Metering mode (Average metering/Center-weighted metering/Spot metering/Matrix metering)
AWB	White balance (Automatic/Sunny/Cloudy/Fluorescent/Tungsten)
	Beauty mode (Turn Off/Turn On)
	Delete photos/videos
	Start/pause video playback

Set up the camera:

You can customize the camera settings.

  After turning on the camera, press the menu button to open the mode menu and access the system settings.

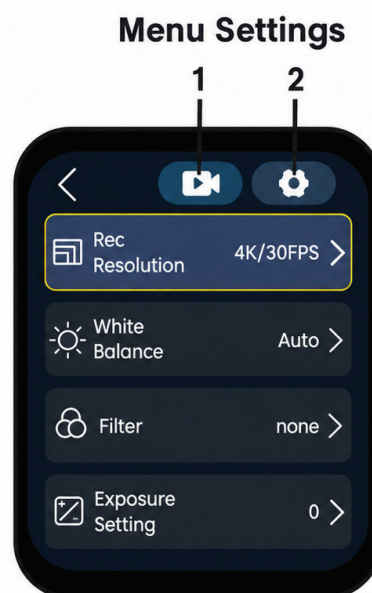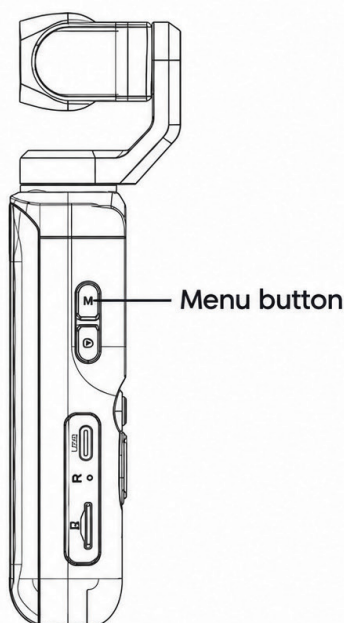

1. Current Mode Submenu
2. System Settings

Using the camera:


Swipe left or right on the screen or press the M key to enter the mode selection page. Swipe to select or use the left/right arrow keys to choose the desired mode, then press the OK button to confirm.

icon	model	illustrate
	Video	Shooting regular videos
	Slow	Shoot high-frame-rate slow-motion videos
	Loop	Continuously record and save the video for a fixed duration
	Lapse	Suitable for static scenes, time-lapse recording captures the passage of time
	Photo	Taking regular photos
	Auto	The camera automatically takes pictures continuously at specific intervals
	Burst	Take multiple photos in quick succession

Insert and format the memory card:

It is recommended to use a Class 10 or faster memory card.

 1. Insert the memory card until you hear a "click".

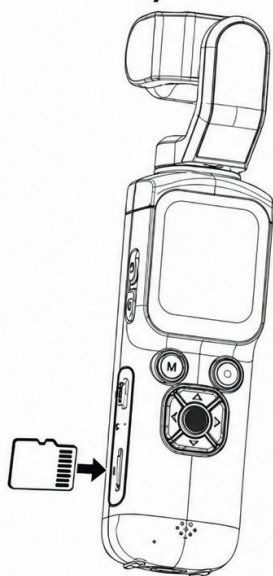


Insert the card in the direction shown in the diagram, paying attention to the edges and corners

2. To remove the memory card, push the memory card in, and it will pop out automatically.

Format the memory card:

 It is recommended to format the memory card before first use. To format the memory card, press the Menu button to open the menu system. Then press the left or right button to switch to System Settings. Press the up or down button to find "Format," and then press the OK button to enter the submenu. Select "Confirm" to format the memory card.

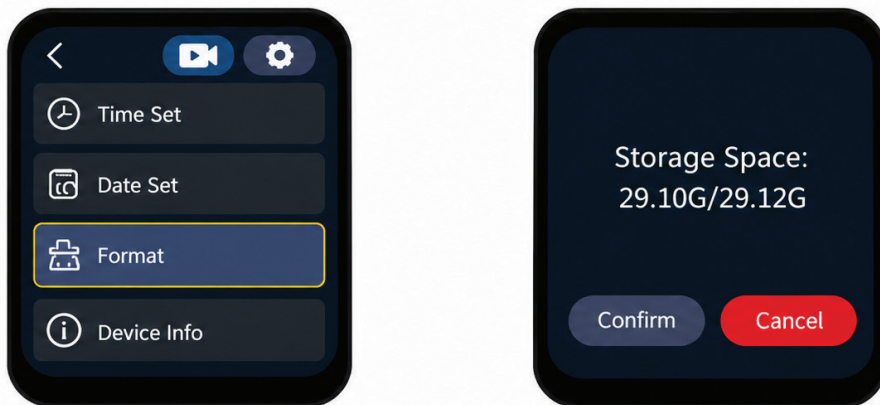

Note:

If the memory card format is not supported, a message will appear on the screen: "Unsupported file system, do you want to format it?". After selecting "Confirm" to format the memory card, the camera can be used normally.

Formatting the memory card will delete all data stored on it, and the data will be unrecoverable. Please save any important data to your PC before formatting.